


Recommended Washing Procedure

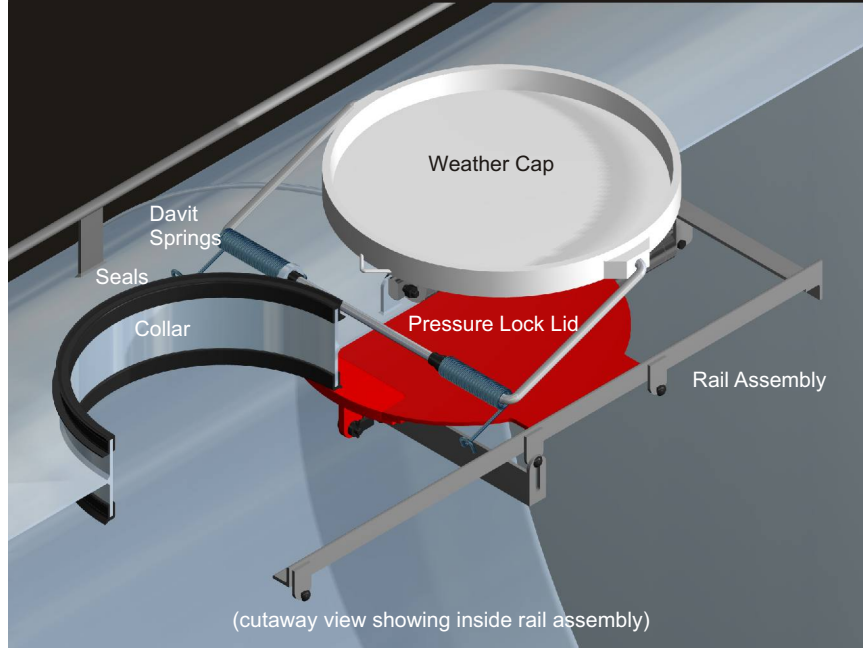

1. Prior to washing perform steps 1 thru 5 of the recommended weekly service procedure.
2. Wash the underside of the Weather Cap, inside of the port collar and top surface of the Pressure Lock Lid.
3. Close the Weather Cap and reattach the davit springs.
4. Cycle the Pressure Lock Lid to the open position.
5. Thoroughly wash the complete rail assembly(inside the trailer).
6. After completing the trailer wash, cycle the Pressure Lock Lid to the closed position, unhook the davit springs and open the Weather Cap.
7. Wipe dry the surface of the Pressure Lock Lid, the seals and the underside of the Weather Cap.
8. Close the Weather Cap and reattach the davit springs.
9. Cycle the Pressure Lock Lid 2 or 3 times to ensure proper operation.

Printed in Canada



Bellseng Technology Inc.
Suite 101, 5418-97 Street
Edmonton, AB T6E 5C1

Phone (780) 448-0988
Fax (780) 461-7435
info@bellseng.com



Caution: If the Red indicator light is not lit, do not attempt to load without visually confirming the position of the Pressure Lock Lid.

1. The Pressure Lock Lid and the Weather cap should be closed when arriving at the loading or unloading site.
2. Pull the control panel valve to open the Weather Cap and the Pressure Lock Lid.
3. Visually check the position of the Weather Cap, the panel lights confirm the Pressure Lock Lid position only.
4. When the loading is complete, push the control panel valve to close both the Weather Cap and the Pressure Lock Lid.

Control Panel Indicator Lights


It is recommended the trailer running lights be left on to power the control panel indicator lights during loading and unloading procedures.



Recommended Daily Service

1. At the end of each day the Pressure Lock Lid should be cycled 2 or 3 times to clear accumulated material from the weather cap, inner lid and rails. Always ensure that the lid is in the closed position when finished.

Recommended Weekly Service

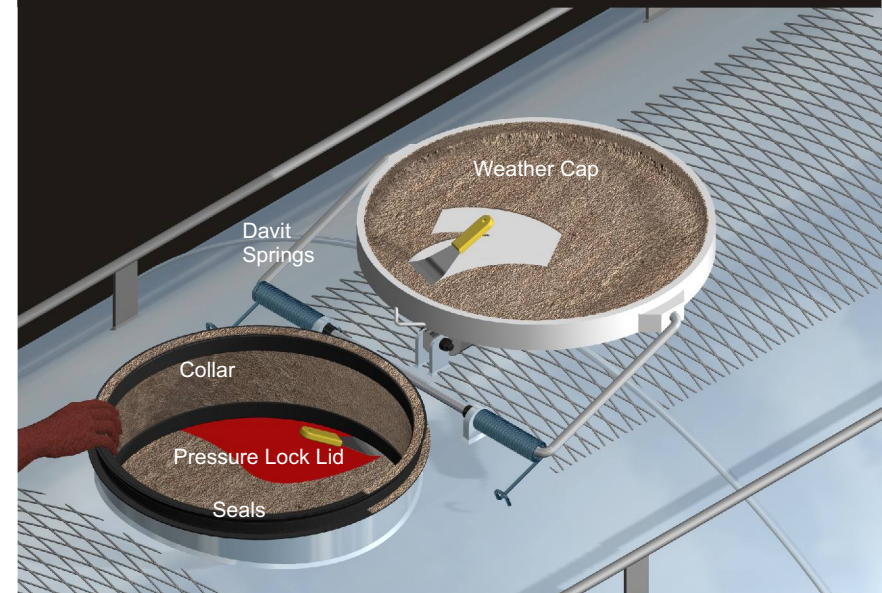

Prior to recommended weekly service, close the Pressure Lock Lid and Weather Cap, **lockout the air supply valve & drain air from cylinders by cycling the control valve**, then perform the following procedure:

1. Unhook the Davit springs as shown
2. Flip the Weather Cap to the position shown.
3. Use a small scraper to remove all the accumulated material from the underside of the Weather Cap.
4. Carefully clean the entire surface of the Pressure Lock Lid, including the area under the seal to the outside edge.
5. Use a gloved hand to remove the accumulated material from the top and outside lip of the Weather Cap seal.
6. Close the Weather Cap and reattach the davit springs.
7. Cycle the Pressure Lock Lid 2 or 3 times to check for proper operation and clear loosened material from the Pressure Lock Lid and rails.